


INSTA ARCH CORPORATION

“The Original Arch”


Double Unit Installation Instructions for Custom Size Window Return Systems



Drywall over window and cut back sheetrock level with circumference of window to allow proper support for installation of Insta Arch.

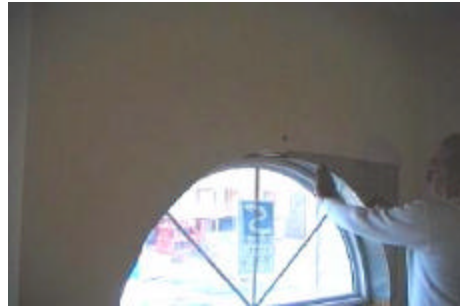

Insert the back flange of Insta Arch secure over the top edge of the window.

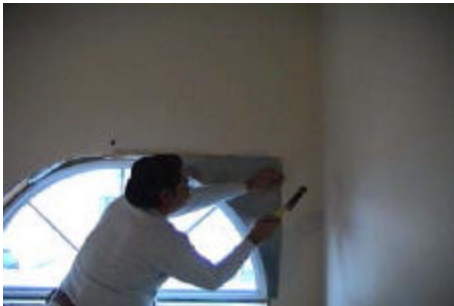


Center off Insta Arch using the middle of the window as a guide, hold secure, and nail into place.



Insert other half of the unit to create Insta Arch. Repeat step three as shown above.



Install a piece of drywall on the bottom ledge of the window. Insert a piece of corner bead end to end and set into place.

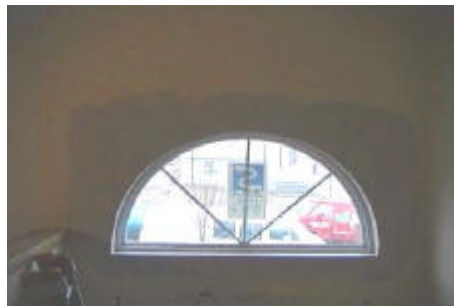

Apply compound evenly to the entire face of Insta Arch and underneath. Feather edges and tape in smooth.

“A Perfect Arch”

In Fifteen Minutes”

INSTA ARCH®

PUT YOUR IMAGINATION TO WORK

For further information please contact: Insta Arch Corporation
17 Hamden Park Drive, Hamden, CT 06517 – 203.288 ARCH
203.288.3836 Fax www.InstaArch.com U.S. Patent #4400917

Tool & Material List:

Drywall, Hammer, and Nails.
Tape Measure, Level, and Cornerbead.
12” Trowel or Blade and 6” Taping Knife.
Mud pan or Hawk, Cement and Sand Paper.